

Motus Traffic Limited

TM-150-2 Technical Reference Guide Error Reset

Version 1

INTENTIONALLY BLANK

For product information and customer support please contact:

Iain Ross at Motus Traffic
mail: iain.ross@motustraffic.com
Phone: +44 1142 617 394

Copyright Notice

© Copyright Motus Traffic Ltd 2010-2016

The information contained in this document is subject to change without notice.
This document contains proprietary information that is protected by copyright.
All rights are reserved.

No part of this document may be reproduced or translated to another language without the prior written consent of Motus Traffic.

Motus Traffic will not be liable for errors contained herein or for incidental or consequential damages (including lost profits) in connection with the furnishing, performance or use of this material whether based on warranty, contract, or other legal theory.

Document: Technical Reference Guide No.1 – Error Reset Issue 1

Date: March 2016

Motus Traffic Ltd
342 Coleford Road
Sheffield
S9 5PH

Record of Changes

The revision history of this document is shown below:

Version	Revision	Author	Description of Changes
A	1	I Ross	Initial Draft
1	0	I Ross	Updated format

Table of Contents

1 Introduction	6
1.1 Related Documents	6
2 Gain Level 3 Access	7
3 Reset Errors	7

1 Introduction

This document provides user information about how to reset a fault on the Motus TM-150-2 and TM-150-2P.

1.1 Related Documents

Other documents exist relating to the controller and are listed below:

TM-150-2 User's Manual	MOTUS/139/075000/001/3-2
TM-150-2P Service Manual	MOTUS/139/075000/002/3
TM-150-2 Programmer's Manual	MOTUS/139/075000/003/1
Motus Traffic RMS Manual	MOTUS/139/075000/004/B
TM-150-2 Training Notes	MOTUS/139/075000/005/A
TM-150-2 Spares List	MOTUS/139/075000/006/A
Motus RMS OMU Set-up Guide	MOTUS/139/075000/009/2-1
Motus TM-150-2 Webpage Log Extraction Guide	MOTUS/139/075000/009/3-1
Motus TM-150-2 Handset Commands Guide	MOTUS/139/075000/009/4-1
Motus RMS & Cloud Administration Guide	MOTUS/139/075000/009/5-1

2 Gain Level 3 Access

To gain L3 user access permissions, first key in the security code via the front panel follow these steps:

1. Press **π0** followed by *001*.
The controller will display:

```
1=L1 - 2=L2 - 3=L3
Current Level:    1
New Level:       -
```

2. Press *3* to select L3 then press **ENTER** to accept
The controller will display:

```
CODE level-3 = XXXX
```

3. Enter the four digit L3 security code (*contact Motus*) and press the **ENTER** button to accept.
The controller will display:

```
CODE level-3 Opened
```

3 Reset Errors

1. To reset the errors press the **ERROR** button. **The controller will display:**

```
>F200 Current Errors
F201 Reset Errors
```

2. Press the **DOWN ARROW** to move the cursor to the *Reset Errors* Line and Press **ENTER**. The controller will display:

```
Reset all errors?
Verify with ENTER
```

3. The controller will display the **** CLEARED **** message to confirm that the errors are reset:

```
Reset all errors?
** CLEARED**
```

END OF DOCUMENT